



- 42. 측면음향반사판 4 (#4 ACOUSTICAL SHELL-SIDE WALL)
- 41. 측면음향반사판 3 (#3 ACOUSTICAL SHELL-SIDE WALL)
- 40. 측면음향반사판 2 (#2 ACOUSTICAL SHELL-SIDE WALL)
- 39. 측면음향반사판 1 (#1 ACOUSTICAL SHELL-SIDE WALL)

- 38. 하늘막 (CYCLORAMA)
- 37. 흑막 (HOUSE BLACK)
- 36. 장치봉 19 (#19 SET BATTEN)
- 35. 장치봉 18 (#18 SET BATTEN)
- 34. 장치봉 17 (#17 SET BATTEN)
- 33. 하늘막상단조명 (SKY CYC. LIGHT)
- 32. 조명봉 5 (#5 LIGHT BATTEN)
- 31. 장치봉 16 (#16 SET BATTEN)
- 30. 장치봉 15 (#15 SET BATTEN)
- 29. 끌막 5 (#5 DRAW CURTAIN)
- 28. 후면음향반사판 (ACOUSTICAL SHELL-BACK WALL)
- 27. 조명봉 4 (#4 LIGHT BATTEN)
- 26. 장치봉 14 (#14 SET BATTEN)
- 25. 장치봉 13 (#13 SET BATTEN)
- 24. 후사막 (REAR SCREEN)
- 23. 끌막 4 (#4 DRAW CURTAIN)
- 22. 천장음향반사판 2 (#2 ACOUSTICAL SHELL-CEILING)
- 21. 장치봉 12 (#12 SET BATTEN)
- 20. 조명봉 3 (#3 LIGHT BATTEN)
- 19. 끌막 3 (#3 DRAW CURTAIN)
- 18. 장치봉 11 (#11 SET BATTEN)
- 17. 장치봉 10 (#10 SET BATTEN)
- 16. 장치봉 9 (#9 SET BATTEN)
- 15. 장치봉 8 (#8 SET BATTEN)
- 14. 조명봉 2 (#2 LIGHT BATTEN)
- 13. 장치봉 7 (#7 SET BATTEN)
- 12. 장치봉 6 (#6 SET BATTEN)
- 11. 끌막 2 (#2 DRAW CURTAIN)
- 10. 장치봉 5 (#5 SET BATTEN)

- 09. 천장음향반사판 1 (#1 ACOUSTICAL SHELL-CEILING)
- 08. 장치봉 4 (#4 SET BATTEN)
- 07. 장치봉 3 (#3 SET BATTEN)
- 06. 조명봉 1 (#1 LIGHT BATTEN)
- 05. 끌막 1 (#1 DRAW CURTAIN)
- 04. 장치봉 2 (#2 SET BATTEN)
- 03. 장치봉 1 (#1 SET BATTEN)
- 02. 반막 (HOUSE CURTAIN)
- 01. 방화막 (SAFETY CURTAIN)
- 00. 영점선 (ZERO LINE)

- 01. 앞무대조명 1 (#1 APRON LIGHT)
- 02. 앞무대조명 2 (#2 APRON LIGHT)